

GENERAL INSTALLATION GUIDE

Under Soffit Installation

INSULATION FASTENERS

PIRMAX HR Panel can be fully secured to a concrete soffit by the use of approved insulation fasteners. 5 insulation fasteners can be used in suspended ceiling applications or where the boards will not be subject to external wind pressure or fire ratings, however 11 insulation fasteners is recommended and the insulation fasteners must have a minimum head diameter of 35mm.

The material of the fixings should also be appropriate for the application, exposure and fire rating as advised by the fixing manufacturer.

DIRECT FIXING TO SOFFITS

1. The fasteners should be evenly distributed over the whole area of the board. Install 4 fasteners evenly across each length, no less than 50mm and no greater than 150mm in from the edge.

Install 3 fasteners along the centre of the board as per the diagram.


2. Board joints can be either staggered or squared and taped with a minimum 75 mm wide high quality aluminium foil tape. When taping, ensure the surfaces are clean, sound and free of dust and contaminants. Use a tape applicator to apply appropriate pressure to the tape.

3. Installers should check their specific project to make sure there are not any non-standard fixing requirements. Where the board may be subject to external wind pressure, the requirement for additional fixings should be assessed in accordance with appropriate Australian wind load standards.


PENETRATIONS

If there are fire collar penetrations in the soffit, then a clearance of a minimum of 25mm must be maintained between the fire collar and the insulation board.

11 insulation fastener pattern (recommended)

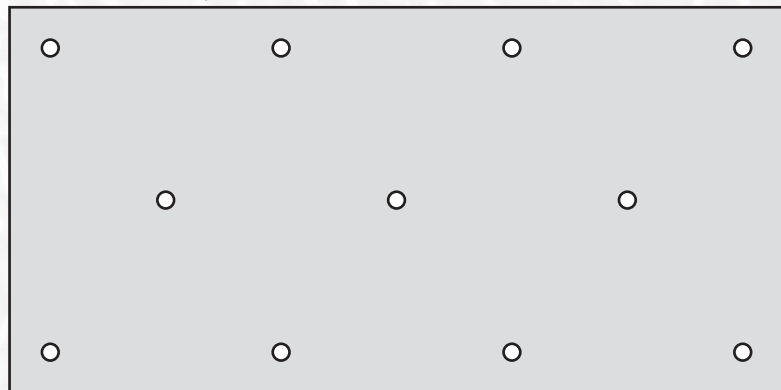

5 insulation fastener pattern (suspended ceiling/no external wind pressure applications)

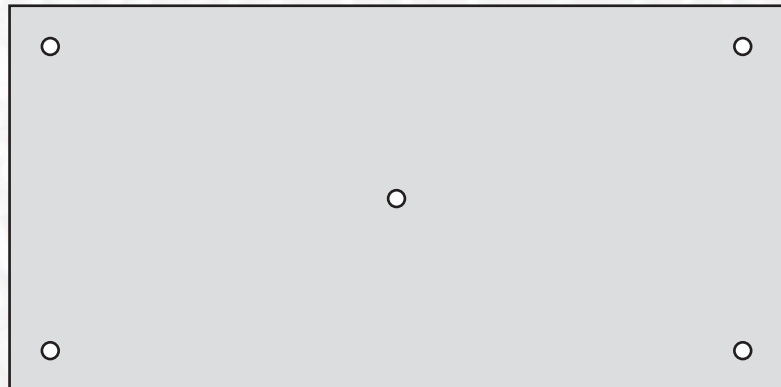

Distributed by:

	Phone: 1300 720 185	Email: info@reflexinsulation.com.au	
	New South Wales / ACT	Western Australia	South Australia / Northern Territory
	Fax: (02) 4623 1616 PO Box 377, Narellan NSW 2567 Woodpark Rd, Smithfield NSW	Fax: (08) 9467 0570 PO Box 1677, Canning Vale DC WA 6970 Kurnall Rd, Welshpool WA	Fax: (08) 8284 1293 PO Box 77, Salisbury South BC SA 5106 Churchill Rd North, Cavan SA

AUSTRALIAN OWNED, AUSTRALIAN MANUFACTURED. Manufactured by: PIRMAX Pty Ltd 9/170 Boundary Road, Braeside VIC 3195 T: 03 9587 0955 F: 03 9587 0966 E: pirmax@bigpond.com © 2016 Reflex Insulation Pty Ltd All Rights Reserved. Disclaimer: The installer/user of these products will need to determine if the product is suitable for the use in the intended application. Information on this brochure is believed to be correct at the time of publication. Pirmax Pty Ltd take no responsibility for the misinterpretation, misuse and misrepresentation of information provided on this brochure. Pirmax Pty Ltd reserves the right to change the content of this publication without any notice.